


You will need:

- ~or~ hammer with panel pins Hand Drill
- 10mm Drill bit
- 38mm Galvanised Screws

Step I

Measure, mark, and cut the wood according to the following dimensions (measurements are in mm):

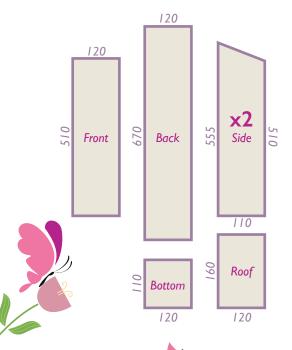








Use your air gun or hammer to pin the back of the house to the sides

Step 3

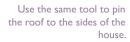



Step 4




Repeat for the bottom of the house.



Step 5

Mark the front of the house according to the following measurements (measurements are in mm):

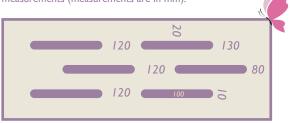



Step 6



Drill holes in each end of the marked out slots.

Step 7

Use the jigsaw to cut straight lines to connect the drill holes, this will create the slots.



Step 8



Ideally you should find some bark or a branch to place inside the house for the butterflies to cling to. In this instance we found a loose branch and cut to size and secured with screws from the back of the box.

Step 9





Step 10

Sand any harsh edges and you are complete!

